

# JDB8451 Input/Output Module

## Manual and Installation Instructions

Release 4.01  
Issued Nov 22, 2019

### Description

The **JDB8451** is an input/output expansion module compatible with the Johnson Controls family of Field Controllers and Network Controllers. It is designed to provide additional inputs and outputs for all compatible controllers that are programmed with the controller configuration tool (CCT). The device **JDB8451** provides the control of four 1-state drives with integral manual overrides for the binary outputs selected by 3 position switches. The run and fail status of the corresponding inputs is indicated by the LEDs, the fail indication LEDs are user defined red or green.

The 4 Binary Outputs and 8 Binary Inputs can also be configured independently as additional physical points for the host controller.

The **JDB8451** module is a DIN rail mountable device and includes the terminals for wiring the physical input and output points, the manual overrides and the status and troubleshooting LEDs. The **JDB8451** module communicates with the host controller via the controllers SA (sensor/actuator) bus.

Configuring and commissioning of the **JDB8451** module is done using the Controller Configuration Tool (CCT).



### Part Numbers and Designations

Part-No.	Designation	Description
00002891	JDB8451	Rail mounted Input/Output module

### Parts Included

- One JDB8451 Input/Output Module with removable Terminal Plugs.
- One Installation Instructions sheet.

## Installation

Observe these guidelines when installing the JDB8451 module(s):

- Transport the modules in the original container to minimize vibration and shock damage to the devices.
- Do not drop the JDB device or subject it to physical shock.
- Verify that all parts are shipped with the JDB modules.

## Mounting

Follow these guidelines when mounting JDB8451 modules:

- Mount the JDB module in areas free of corrosive vapours and observe the environmental limitations listed in the *Technical Specifications* section.
- Do not mount the JDB module on surfaces that are prone to vibration.
- Do not mount the modules in areas where electromagnetic emissions from other devices or wiring can interfere with JDB modules communication.
- Mount the JDB module so that no other parts or devices obstruct ventilation of or radiate heat into the modules housing.

## Materials and Special Tools Needed

- One 45 mm (1.8 in.) or longer piece of DIN rail and appropriate hardware for mounting the DIN rail.
- Small straight blade screwdriver for securing the wires in the terminal blocks.
- Medium straight blade screwdriver for loosening the device from the DIN rail.

## DIN Rail Mount Applications

To mount modules on a DIN rail:


1. Securely mount a 45 mm (1.8 in.) or longer section of DIN rail horizontally and centred in the required space. Allow sufficient space for cable and wire connections (minimum of 50 mm [2 inches] above and below the module, i.e. a total height of approximately 200 mm [8 inches]).
2. Hang the rail mounted devices by the DIN rail hook on the top track of the DIN rail, and position the module's DIN rail channel snugly against the tracks of the DIN rail.
3. The bottom mounting clip must click into place to fix the JDB module securely on the DIN rail.
4. To remove a module from the DIN rail, pull the bottom DIN clip carefully down to the extended position and lift the module off the DIN rail.

## Wiring

Please pay attention to all specifications and guidelines documented by Johnson Controls concerning devices running on the MS/TP-Bus. Refer to the *MS/TP Communications Bus Overview Technical Bulletin (LIT-12011034)* for further information.

### To wire the JDB8451 module:

1. Terminate wiring as per engineering drawing (see Figure 1) and connect other devices to the SA Bus as required. Wire the SA Bus in a daisy chain.  
**Note:** If multiple Input/Output Modules are used, and the JDB8451 module is located at one end of the SA Bus daisy chain, set the End-of-Line (EOL) switch to Terminated on the last Module (see Figure 3).
2. Ensure the device address DIP switches are set to the appropriate hardware address (in the range of 128-254). See *Setup and Adjustments*.
3. Connect a 24Vac power supply to the JDB8451 module.
4. Download and commission the JDB8451 module. See *Configuring and Commissioning*. The point definitions are automatically downloaded into the JDB8451 module after the host controller has been put into operation by means of the CCT tool and the Input/output modules have been detected by the host controller.

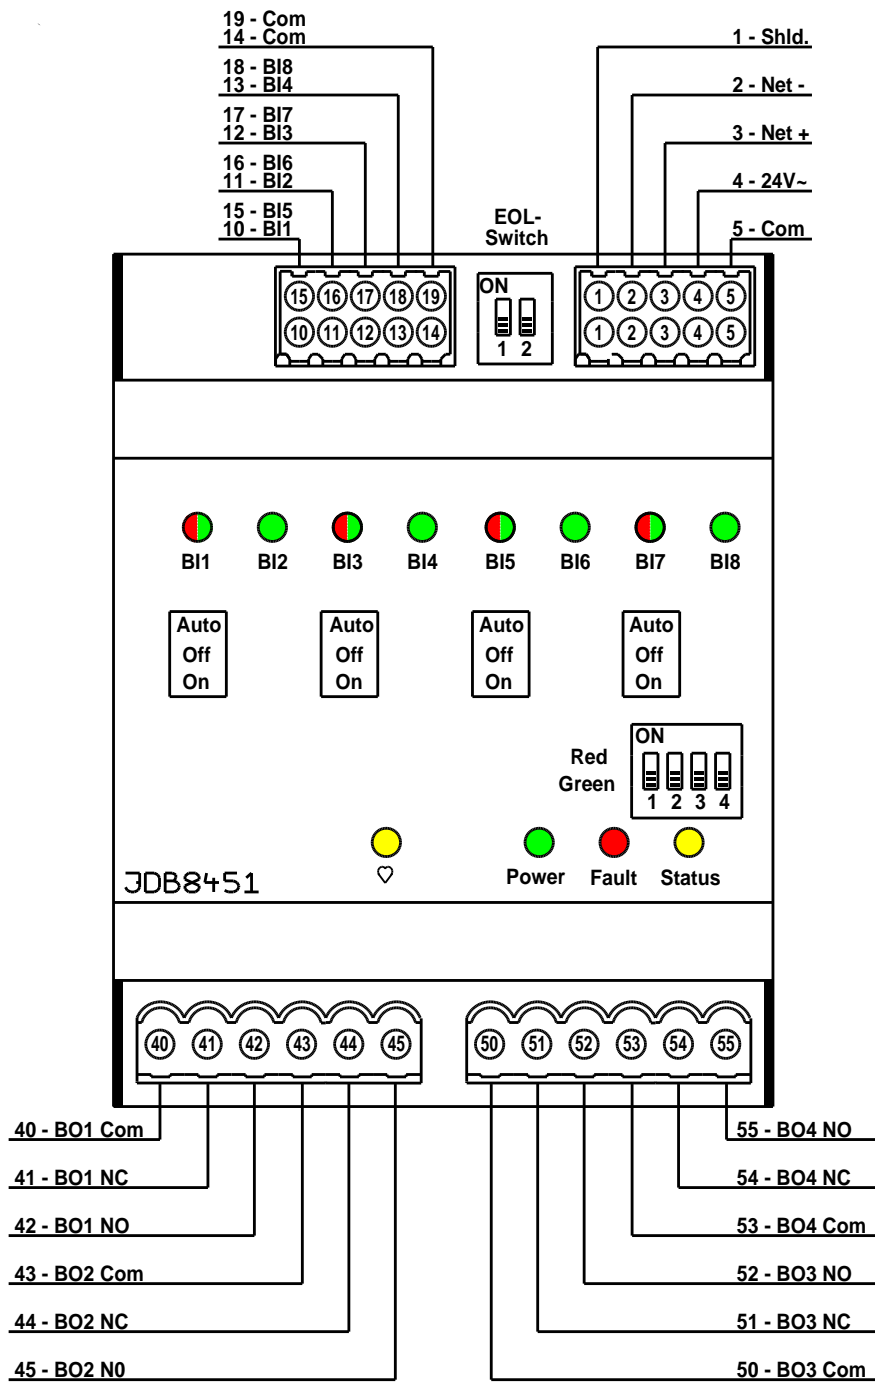

**Figure 1: JDB8451 Module Wiring Interface**



**Note:** The SHLD terminal on the SA Bus neither provides an electrically grounded connection or power source for other devices on the SA Bus. It only provides a convenient terminal for connecting the screens of the daisy-chained network cable.

**Table 1: Romutec I/O-Modules Family Wiring List (Part 1 of 2):**

Terminal Block	Label in Wiring Interface	Function and Electrical Ratings/Requirements	Wiring Requirements
<b>Binary IN</b> (Terminals 11 - 19)	BI <i>n</i>	Binary Input, Dry Contact Maintained Mode 0.01 s minimum pulse width (50 Hz at 50% duty cycle) Internal 35 V, 2.7kΩ pull-up	A
	COM	The signal common for all Binary IN terminals; combined with power supply terminal commons	
<b>Binary OUT</b> (Terminals 40 - 45 & 50 - 55)	BO <i>n</i> NO	Binary Output, up to 250 VAC Relay Contact Connects BO <i>n</i> NO to BO Com when activated  <u>Characteristics (Resistive Load):</u> Initial contact resistance 100mΩ (at 1A / 24 VDC) Rated load 5 A at 250 VAC, 5 A at 30 VDC, 10 A at 125 VAC Max. switching voltage 277 VAC, 30 VDC Max. switching capacity 1250 VA (AC), 150 W (DC) Endurance 1x10 <sup>5</sup> ops (Rated Load), 1x10 <sup>7</sup> ops (no Load)	0.5-1.5 mm <sup>2</sup> (20-16 AWG) stranded cable
	BO <i>n</i> NC	Binary Output, up to 250 VAC Relay Contact Disconnects BO <i>n</i> NC from BO Com when activated  <u>Characteristics (Resistive Load):</u> Initial contact resistance 100mΩ (at 1A / 24 VDC) Rated load 3 A at 250 VAC, 3 A at 30 VDC, 5 A at 125 VAC Max. switching voltage 277 VAC, 30 VDC Max. switching capacity 750 VA (AC), 90 W (DC) Endurance 1x10 <sup>5</sup> ops (Rated Load), 1x10 <sup>7</sup> ops (no Load)	
	BO <i>n</i> Com	The output signal common for Binary OUT terminals; isolated from all other terminal commons, including BO terminal commons	

**Table 2: Romutec I/O-Modules Family Wiring List (Part 2 of 2):**

Terminal Block / Function Group	Label in Wiring Interface	Function and Electrical Ratings / Requirements	Wiring Requirements
<b>SA Bus<sup>1)</sup></b> (Terminals 1 - 3)	Net + Net -	Provides SA Bus communication network	Daisy-chained 366 m maximum length
	Shld	Terminal for the shield of the SA Bus cable	0.5 mm <sup>2</sup> to 1.5 mm <sup>2</sup> [0.75 mm <sup>2</sup> recommended]
<b>24~ Power</b> (Terminals 4 & 5)	24~	AC Supply Input, Supply 24 VAC ± 10%	0.75 mm <sup>2</sup> to 1.5 mm <sup>2</sup> [1.0 mm <sup>2</sup> recommended]
	COM	The 24~ Power common; combined with BI-terminal commons	

<sup>1)</sup> The SA Bus specifications in this table are for MS/TP bus communications at 38.4k. For more information, refer to the Johnson Controls *MS/TP Communications Bus Technical Bulletin (LIT-12011034)*.

**Table 3: Wire Gauge and Length Guidelines**

Guideline	Cable Size	Maximum Length	Assumptions
<b>A</b>	1.5 mm <sup>2</sup> (16 AWG)	457.2 m (1,500 ft)	100 mV maximum voltage drop
	1.0 mm <sup>2</sup> (17 AWG)	304.8 m (1000 ft)	
	0.75 mm <sup>2</sup> (18 AWG)	228.6 m (750 ft)	
	0.5 mm <sup>2</sup> (20 AWG)	152.4 m (500 ft)	
	0.35 mm <sup>2</sup> (22 AWG)	106.7 m (350 ft)	

## Setup and Adjustments

### Determining the SA Bus Address


The SA bus address switch sets a unique address for this module on the SA bus. The default address setting is 255 (all ON). You must change this address.

Set consecutive addresses, 128 through 254, for JDB and JAB modules and other subordinate devices on the SA bus.

Set the address of the JDB8451 module using the Dual Inline Package (DIP) switches on the side of the JDB8451 module. The address equals the sum of the numbers set to ON. For example, if the second (2), the fifth (16), and the eighth (128) DIP switches are set to ON, the device address is 146 (2 + 16 + 128 = 146). See Figure 2.

**Table 4: FC Bus/SA Bus Address Descriptions**

Address	Description
0	Reserved for FC Bus supervisory controller
1-3	Reserved for peripheral devices. (e.g. for FEC local display, address fixed = 3)
4-127	Illegal addresses for Romutec I/O modules – Reserved for field equipment controllers (FEC) and Metasys® IOM master devices. NCE's address fixed = 4
128-254	<b>Valid range of addresses-for Romutec I/O-Modules (Subordinate devices)</b>
255	Default address – must be changed

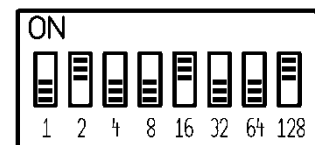

**Figure 2:  
Setting the Address DIP switches**


### SA Bus termination

The SA Bus End-of-Line termination switch allows you to designate the JDB8451 module as the end of the SA Bus. The default position is OFF, i.e. not terminated, as shown in figure 3 (factory setting). If the JDB8451 module is at the end of a daisy chain of devices on the SA Bus, set **both** EOL switches to the ON position.

**Note:** The EOL switched should be either set to the default position as shown in Figure 3 or with both switches 1 and 2 set to ON when used as a SA Bus network terminator.

**Table 5: Valid values for EOL switches Adjustment**

Value	Description
0	not terminated
1	adjustment not valid
2	adjustment not valid
3	terminated

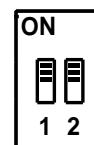


**Figure 3:  
Setting EOL switches**

### Encoding the LED Colour

The colour of LEDs 1, 3, 5 and 7 (fail) can be user selected by setting the DIP switches that are located at the front of the module JDB8451. Depending on the position of the switch, the LED will be red or green. (See figure 4). All other LEDs (2, 4, 6 and 8) are factory set to green and cannot be changed.

With the switch set to the ON position the LED will be red, when the switch is set to OFF the LED will be illuminated in green.

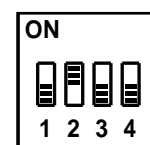

**Figure 4:  
Colour of Fault-LED of channel 2 is red, other LEDs are green**

## Configuring and Commissioning

The parameters for configuring the JDB8451 are defined using the CCT Tool and will be stored together with the other controller application data in the \*.caf file (Controller Application File). During commissioning this data is downloaded to the controller. Once the host controller has detected the JDB8451 with the appropriate address, it will automatically send the configuration data to this module.

The manual control functions are available independently from the SA-Bus connection of the JDB8451 module to the host controller, i.e. the binary outputs can be switched to ON or OFF at any time using the switches on the front of the module.

When adding the JxBxx51 devices to the SA Bus in the CCT it is necessary to select the equivalent JxBxx10 model from the SA Bus Device list, see table 6.

**Table 6: CCT Reference**

Model Number	Description	CCT Reference	CCT Description
JDB8451	8BI, 4BO Integral Overrides	JDB8410	I/O MODULE 8BI w LEDs, 4 Relay w HOA
JDB6451	6BI, 4BO Integral Overrides (2 x 2-state drives)	JDB6410	I/O MODULE 6BI w LEDs, 2 Relay Pairs w HOA
JDB8051	8BI Integral Status Indication red/green	JDB8010	I/O MODULE 8BI w LEDs
JAB0451	4AO Integral Overrides	JAB0410	I/O MODULE 4AO w Manual Override
JAB6651	2BI, 2BO, 4AI, 4AO	JAB6610	I/O MODULE 4AI,2BI,4AO,2RO

The status of the binary inputs will be indicated by the LEDs independently from the SA-Bus connection of the JDB8451 module to a host controller. However until the configuration data is sent to the JDB8451 factory default settings are used for all polarity parameters i.e. polarity = NORMAL. This means that the LED on the front panel will be lit when the contact of the corresponding binary input is closed. This can be changed using CCT to modify the **Hardware Setup** attribute 'Polarity' to REVERSE, saving the changes and downloading the \*.caf file to the host controller. The host controller will update the configuration data in the JDB8451 module.

For more information concerning the Controller Configuration Tool software (CCT), please refer to the *CCT Help*.

## Troubleshooting

Use Table 7 as a guide to troubleshoot the JDB8451 module.

**Table 7: Status LEDs of the JDB8451 module**

Name	Colour	Normal	Descriptions
<b>Power</b>	Green	On Steady	Off Steady = No Power, 24V AC missing On Steady = Power is Supplied by Primary Voltage 24V AC
<b>Fault</b>	Red	Off Steady	Blink - 2 Hz = Download or start up in progress, not ready for normal operation Off Steady = No Faults On Steady = Device Fault or Bootloader Mode
<b>Status</b>	Orange	Blink	Blink = Data Transmission (send, normal communication) Off Steady = No Data Transmission or auto baud in progress
<b>♥ LED</b>	Orange	Flicker	Flicker = Internal System Check ok Off Steady /On Steady = Restart or replace device

## Technical Specifications

### General Specifications

<b>Ambient Operating Conditions</b>	0 to 50°C (32 to 122°F); 10 to 90% RH non-condensing
<b>Ambient Storage Conditions</b>	0 to 70°C (32 to 158°F); 10 to 90% RH non-condensing
<b>Standards Compliance</b>	CE Directive 2014/30/EU CE Directive 2014/35/EU

### JDB8451 I/O Module

<b>Product Code Numbers</b>	JDB8451 Input/Output Module
<b>Supply Voltage</b>	24 VAC ± 10% at 50 or 60 Hz
<b>Power Consumption</b>	12 VA maximum
<b>Terminations</b>	Spring-type terminals for I/Os, power supply and MS/TP Bus
<b>Device Addressing</b>	DIP switch set (128-254). Addresses 0-127, 255 are reserved
<b>Communications Bus</b>	BACnet® MS/TP; 4-wire SA Bus <sup>1)</sup> (only 3 wires used)
<b>Mounting</b>	35 mm DIN rail
<b>Dimensions (H x W x D)</b>	92 x 72 x 70 mm (3.6 x 2.8 x 2.8 in.) Minimum space for mounting: 120 x 72 x 70 mm (4.7 x 2.8 x 2.8 in.)
<b>Housing</b>	Plastic housing, Plastic material: PCGF10 Protection: IP20 (IEC529)
<b>Weight</b>	JDB8451: 0.21 kg (0.46 lb)

<sup>1)</sup> For more information, refer to the Johnson Controls *MS/TP Communications Bus Technical Bulletin (LIT-12011034)*.

*The performance specifications are nominal and conform to acceptable industry standard. For application at conditions beyond these specifications, consult the local Romutec office. Romutec GmbH shall not be liable for damages resulting from misapplication or misuse of its products.*

Latest Information and Firmware Updates will be available on the website [www.romutec.de](http://www.romutec.de)